


Zyklon



User Manual

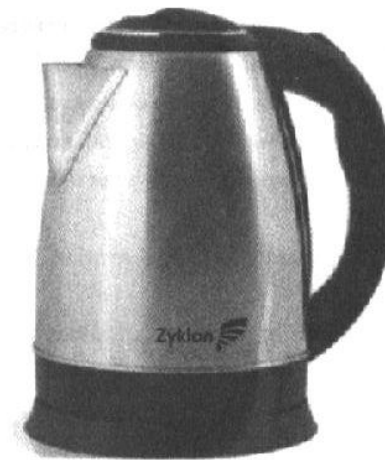

MODEL: Z-5200

THANK YOU FOR PURCHASING ELECTRIC KETTLE. PLEASE READ ALL INSTRUCTION CAREFULLY BEFORE USE AND BE SURE TO KEEP THE MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE.

IMPORTANT SAFEGUARDS

1. Please read these operation instructions through carefully before connecting your kettle to the power supply, in order to avoid damage due to incorrect use.
2. Incorrect operation and improper handling can lead to faults on the appliance and injuries to the user.
3. The appliance is designed for household use only.
4. Unplug the appliance from power supply when not in use.
5. Keep the base unit away from damp and protect from splashes.
6. Do not immerse the unit, cord or plug in water or other liquids. If this should occur, remove the plug immediately and then have the unit checked by an expert before using it again.
7. Do not operate the appliance if the cord or plug show signs of damage, if the appliance has fallen on the floor or has been otherwise damaged. In such cases take the appliance to a specialist for checking and repair if necessary.
8. Ensure that the cord does not hang over sharp edges and keep it away from hot surfaces.
9. Only pull it out of the power supply by the plug, not by the cord.
10. Place the appliance on a stable surface, away from hot objects (e.g. hotplates), naked flames; do not place under curtains or low wall-cupboards.
11. You should never leave the appliance unattended during use.
12. Children should never use electrical domestic appliances unsupervised.
13. Use the kettle only with the base unit supplied and do not use the base unit for any other purposes.
14. Never remove the kettle from its base until while in operation. Switch the appliance off first.
15. Take care to close the lid properly before switching on. Otherwise, the appliance will not switch off automatically and hot water may overflow.
16. The kettle is for heating water only and is not to be used for any other liquids.

BEFORE USING FOR THE FIRST TIME

1. Remove all packing materials from the kettle
2. Before connecting the kettle check that voltage indicated on the rating label corresponds to the mains voltage in your home.
3. Fill the kettle with cool water up to the "MAX" mark and boil it. Empty the kettle. The appliance is ready for use.

INSTRUCTION FOR USE

FILLING

1. Remove the kettle from the base unit.
2. You can fill the kettle with water via the spout or by opening the lid, by pressing on the lid release button.
3. It is not recommended to fill with less than 1 liters of water to prevent the kettle running dry while operating.
4. Fill the kettle up "MAX" mark only. Avoid overfilling to prevent the water spilling out during the boiling process.

SWITCHING ON

1. After filling your kettle with water place the kettle on the base unit.
2. Connect plug to power supply and pull down the On/ Off switch. The appliance will begin to operate and the indicator light will come on.

SWITCHING OFF

When the water boils, the kettle will switch off automatically and the indicator light will go off.

NOTE: This appliance has a safety system which automatically switches off the heating element if the appliance is inadvertently switched when empty, or if it boils dry. In this case, let the appliance cool down completely, before filling with water again.

CARE AND CLEANING

BEFORE USING FOR THE FIRST TIME

1. Always remove the plug from the power supply and let the appliance cool down completely.
2. Clean the outside of the kettle and the base unit with a soft damp cloth, then wipe with a dry cloth. Do not use scouring materials.
3. Descale at regular intervals. Use a descaling agent, which can be obtained from specialist shops and follow the instructions given.

STORAGE

The cord could be wound in to the base unit that has a cord storage compartment.